

## AXC25/35 AXA35 Remote Control Codes

All Codes are NEC format.

(NEC Code)

Remote Button	IR Code
standby	C0 3F 06 F9
Mute	C0 3F 00 FF
open/close	C0 3F 02 FD
1	C0 3F 0A F5
2	C0 3F 09 F6
3	C0 3F 08 F7
4	C0 3F 0E F1
5	C0 3F 0D F2
6	C0 3F 0C F3
7	C0 3F 12 ED
8	C0 3F 11 EE
9	C0 3F 10 EF
0	C0 3F 16 E9
Prog	C0 3F 15 EA
Prog Clear	C0 3F 14 EB
Volume Up	C0 3F 1D E2
Menu	C0 3F 5A A5
Volume Down	C0 3F 5E A1
Pause	C0 3F 07 F8
stop	C0 3F 44 BB
play	C0 3F 45 BA
left skip	C0 3F 48 B7
right skip	C0 3F 49 B6
left scan	C0 3F 4C B3
right scan	C0 3F 4D B2
random	C0 3F 13 EC
repeat	C0 3F 50 AF
remain	C0 3F 51 AE
A1/AUX	C0 3F 5C A3
A2	C0 3F 1B E4
A3	C0 3F 59 A6
A4	C0 3F 1F E0
PHONO	C0 3F 5D A2

